

VE-2500 (Frolik®)


Our personal and portable light





- Brilliant LEDs project over 2,500 Lux at 16"
- Patented optics minimize glare and weigh only 0.4 oz.
- New generation plugs in AC adaptor, rechargeable power bank or USB port

Easy to slide on glasses, caps, or visors

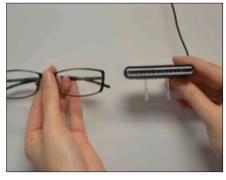



Hold glasses by the bridge. With the other hand, slide the light onto frames.

- Slide clear clips over nose pads
- Plug in and flip on/off switch
- Tilt to shine on text
- Tuck cable over ear

Several new ways to enjoy







Choose white or green. Projects 2,500 Lux at 16". Weighs only 0.4 oz.

Plug into any USB.
AC adaptor and
power bank included.

Toggle on/off.
Switch built into power cable.

To charge the power bank

- 1. Plug the charge cable into the small "5V in" port in power bank
- 2. Plug USB connector on charge cable into an AC adaptor (90-240 VAC, 50/60 Hz) or other USB port for about 3 hours

Important safety information

- It is normal for the illuminator to become warm due to LED intensity.
- Do not damage or puncture the battery in the power bank. A fire risk exists in such an event. Properly dispose of any damaged power bank.
- Do not use the AC adaptor if it is damaged or immersed in water, as it could pose a fire or shock hazard.
- Do not open the illuminator enclosure. There are no user serviceable parts; doing so would void the warranty.

Warranty and service

Jasper Ridge Inc. warrants the VisionEdge® against defects in material or workmanship for one year from shipment and agrees to repair or replace. Warranty excludes damage from normal wear and tear or abuse. The illuminator clips have a lifetime guarantee.

See happy!

"See happy" video at www.jasperridge.net. VisionEdge® and Frolik® are trademarks of Jasper Ridge Inc.